







FORPAC<sup>®</sup> Wedges are best to be used with FORPAC<sup>®</sup> Spacer Clips, which are sold separately.

## Pieces x Square Feet

			
<b>12x12"</b>	<b>4</b>	<b>6x36"</b>	<b>4</b>
<b>18x18"</b>	<b>2</b>	<b>12x36"</b>	<b>3</b>
<b>20x20"</b>	<b>1</b>	<b>12x48"</b>	<b>2</b>
<b>24x24"</b>	<b>2</b>	<b>18x36"</b>	<b>1</b>
<b>32x32"</b>	<b>1</b>	<b>24x12"</b>	<b>3</b>
<b>48x48"</b>	<b>1</b>	<b>40x20"</b>	<b>1</b>
<b>6x24"</b>	<b>4</b>	<b>48x24"</b>	<b>1</b>

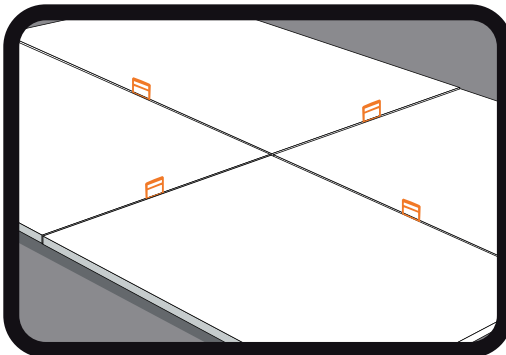

1. After placing the tile on the floor proceed placing the FORPAC<sup>®</sup> Spacer Clip two inches away from each corner of the tile.

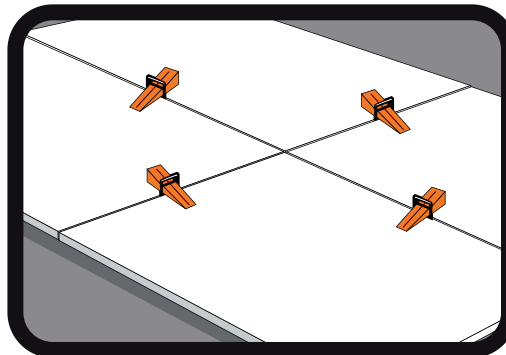

2. Slide the FORPAC<sup>®</sup> Wedge through the opening of the each Spacer Clip to ensure your tiles are leveled. Tighten the wedge either with hand or rubber mallet.